## **KOLLYgram Online Documentation**

**Measures XML file** 

## Versions

Date	Initial	Description
16.04.2015	QO	Initial document

This document provides information about the downloadable XML file that contains measures on the KOLLYgram web site.

To download this XML file, go to the KOLLYgram web site (https://kg15.kollyapps.com/) and choose "Create a report" under Measures/Reports after being logged in.

In the document, each line represents a measure. Each measure possesses the following fields:

Field	Туре	Comment
nr	long	Deprecated field, you don't need to use it
customer_nr	int	The customer number (not the user id)
customer_name	String	Deprecated field, you don't need to use it
measure_type	String(1)	The type of the measure:
		o=online
		w=wiga(targo)
		s=swt
		h=manually added
		x=added via webservice/API
		v=weelvaarts
		m=added via kollygramcemobile
date	Date	Date the measure started
start	Time	Time the measure started
end	Time	Time the measure ended
date_end	Date	Date the measure ended
quit_nr	int	Number written on the receipt
net	decimal	Net weight of the measure
brut	decimal	Gross weight of the measure
line	String	Deprecated field, you don't need to use it
vehicle	long	Database ID of the vehicle
product	int	Product number
chip	String	Chip number of the first chip
chip2	String	Chip number of the second chip
km_start	decimal	The number of kilometers the truck has driven at
		the beginning of the measure
km_end	decimal	The number of kilometers the truck has driven at
		the end of the measure
changes	String	Description of the modifications made
deleted	Boolean	True if the measure has been deleted
		False otherwise
flag	byte	See Appendix I
date_gps	DateTime	Date from the GPS
lo	double	Location (longitude) of the measure
la	double	Location (latitude) of the measure
north	long	Deprecated field, you don't need to use it
east	long	Deprecated field, you don't need to use it

## Appendix I

Definition of the field "flag":

Bits	Description
0-4	Quality (0 = very good $\rightarrow$ 7 = very bad)
10	Unstable
11	Max slope
12	Max load
6	0=EndCustomer, 1 = Container
	(1 if the measure has been created following
	the emptying of a container.
	Otherwise 0 if the measure has been created
	when the driver has hit the button "End
	customer")